## SHIPPING CLEAT REMOVAL


\*Please exercise caution when handling furniture\*

## Stationary shipping cleat removal

Step 1: Rest unit on its back.




Step 2: Remove Philips head screws and remove cleat.

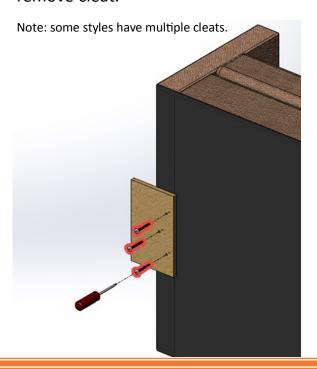

## Motion shipping cleat removal

Step 1: Rest unit on its back.

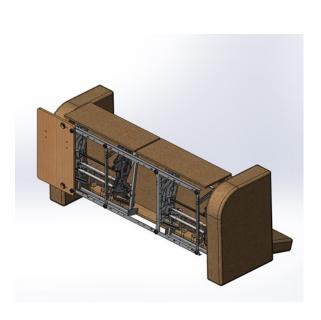


Step 2: Remove two (2) bolts using an 8mm (5/16th inch) socket head and remove cleat.



## **Shipping Leg Removal**

Step 1: Rest unit on its back.

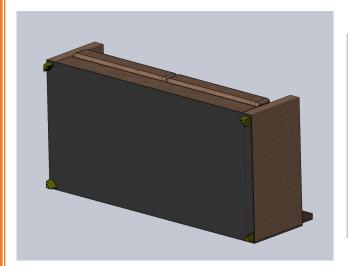

Step 2: Remove (4) shipping legs and discard before applying show legs.

